

CDN Resource Laboratories Ltd.

#2, 20148 – 102nd Avenue, Langley, B.C., Canada, V1M 4B4, 604-882-8422, Fax: 604-882-8466 (www.cdnlabs.com)

REFERENCE MATERIAL: CDN-GS-2L

Recommended value and the "Between Laboratory" two standard deviations

Gold concentration: 2.34 ± 0.24 g/t (30g Fire Assay / Instrumental finish)

PREPARED BY: CDN Resource Laboratories Ltd.
CERTIFIED BY: Duncan Sanderson, B.Sc., Licensed Assayer of British Columbia
INDEPENDENT GEOCHEMIST: Dr. Barry Smee., Ph.D., P. Geo.
DATE OF CERTIFICATION: March 26, 2012

ORIGIN OF REFERENCE MATERIAL:

Standard CDN-GS-2L was prepared using 782 kg of a blank granitic ore and 18 kg of a high grade gold ore.

METHOD OF PREPARATION:

Reject ore material was dried, crushed, pulverized and then passed through a 270 mesh screen. The +270 material was discarded. The -270 material was mixed for 5 days in a double-cone blender. Splits were taken and sent to 15 commercial laboratories for round robin assaying. Round robin results are displayed below:

	Lab1	Lab2	Lab3	Lab4	Lab5	Lab6	Lab7	Lab8	Lab9	Lab10	Lab11	Lab12	Lab13	Lab14	Lab15
Sample	Au g/t	Au g/t	Au g/t	Au g/t	Au g/t	Au g/t	Au g/t	Au g/t	Au g/t	Au g/t	Au g/t	Au g/t	Au g/t	Au g/t	Au g/t
GS-2L-1	2.20	2.45	2.43	2.27	2.33	2.02	2.38	2.50	2.09	2.10	2.38	2.40	2.35	2.45	2.36
GS-2L-2	2.31	2.38	2.42	2.22	2.39	2.32	2.34	2.67	2.25	2.05	2.45	2.31	2.27	2.44	2.45
GS-2L-3	2.32	2.42	2.56	2.29	2.35	2.10	2.35	2.55	2.09	2.05	2.28	2.34	2.30	2.41	2.33
GS-2L-4	2.27	2.52	2.36	2.21	2.39	2.08	2.38	2.62	2.22	2.17	2.50	2.41	2.22	2.39	2.13
GS-2L-5	2.39	2.38	2.33	2.31	2.55	2.00	2.35	2.46	2.15	2.16	2.36	2.35	2.44	2.31	2.42
GS-2L-6	2.29	2.43	2.44	2.33	2.52	2.10	2.34	2.56	2.21	2.16	2.54	2.43	2.10	2.39	2.37
GS-2L-7	2.27	2.42	2.45	2.29	2.36	1.99	2.45	2.55	2.13	2.14	2.41	2.47	2.20	2.36	2.38
GS-2L-8	2.24	2.27	2.23	2.31	2.47	2.34	2.44	2.58	2.28	2.13	2.28	2.40	2.13	2.44	2.26
GS-2L-9	2.28	2.37	2.45	2.26	2.42	2.18	2.44	2.60	2.16	2.17	2.28	2.37	2.17	2.34	2.19
GS-2L-10	2.34	2.41	2.35	2.27	2.53	2.29	2.40	2.58	2.15	2.03	2.37	2.42	2.34	2.35	2.26
Mean	2.29	2.41	2.40	2.27	2.43	2.14	2.39	2.57	2.17	2.12	2.39	2.39	2.25	2.39	2.32
Std. Dev'n	0.0530	0.0642	0.0890	0.0379	0.0800	0.1320	0.0435	0.0591	0.0648	0.0546	0.0919	0.0477	0.1078	0.0476	0.1026
%RSD	2.31	2.67	3.71	1.67	3.29	6.16	1.82	2.30	2.98	2.58	3.85	2.00	4.78	1.99	4.43

APPROXIMATE CHEMICAL COMPOSITION (by whole rock analysis):

	Percent		Percent
SiO ₂	64.2	Na ₂ O	2.5
Al ₂ O ₃	13.1	MgO	3.0
Fe ₂ O ₃	8.8	K ₂ O	1.4
CaO	3.4	TiO ₂	0.6
MnO	0.1	LOI	2.3
Total S	1.0		

REFERENCE MATERIAL: CDN-GS-2L

Statistical Procedures:

The final limits were calculated after first determining if all data was compatible within a spread normally expected for similar analytical methods done by reputable laboratories. Data from any one laboratory was removed from further calculations when the mean of all analyses from that laboratory failed a t test of the global means of the other laboratories. The mean and standard deviation were calculated using all remaining data. Any analysis that fell outside of the mean ± 2 standard deviations was removed from the ensuing data base. The mean and standard deviations were again calculated using the remaining data. This method is different from that used by Government agencies in that the actual "between-laboratory" standard deviation is used in the calculations. This produces upper and lower limits that reflect actual individual analyses rather than a grouped set of analyses. The limits can therefore be used to monitor accuracy from individual analyses, unlike the Confidence Limits published on other standards.


Participating Laboratories: (not in same order as table of assays)

Acme Analytical Laboratories Ltd., Vancouver, B.C., Canada
Activation Laboratories, Ancaster, Ontario, Canada
Activation Laboratories, Thunder Bay, Ontario, Canada
Alex Stewart Assayers, Mendoza, Argentina
ALS Brisbane, Australia
ALS Chemex, North Vancouver, B.C., Canada
AGAT, Mississauga, Ontario, Canada
American Assay Laboratories, Nevada, USA
Genalysis Lab Services, Australia
Labtium Inc., Finland
SGS, Lima, Peru
SGS, Vancouver, B.C., Canada
Skyline, Arizona, USA
TSL Laboratories Ltd., Saskatoon, SK, Canada
Ultra Trace Laboratories Ltd., Australia

Legal Notice:

This certificate and the reference material described in it have been prepared with due care and attention. However CDN Resource Laboratories Ltd. nor Barry Smee accept any liability for any decisions or actions taken following the use of the reference material. Our liability is limited solely to the cost of the reference material.

Certified by

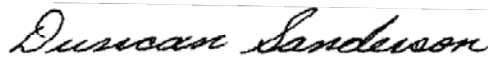

Duncan Sanderson, Certified Assayer of B.C.

Geochemist



Dr. Barry Smee, Ph.D., P. Geo.